


ERV Flashers / Ext Light Controls (dashboard)

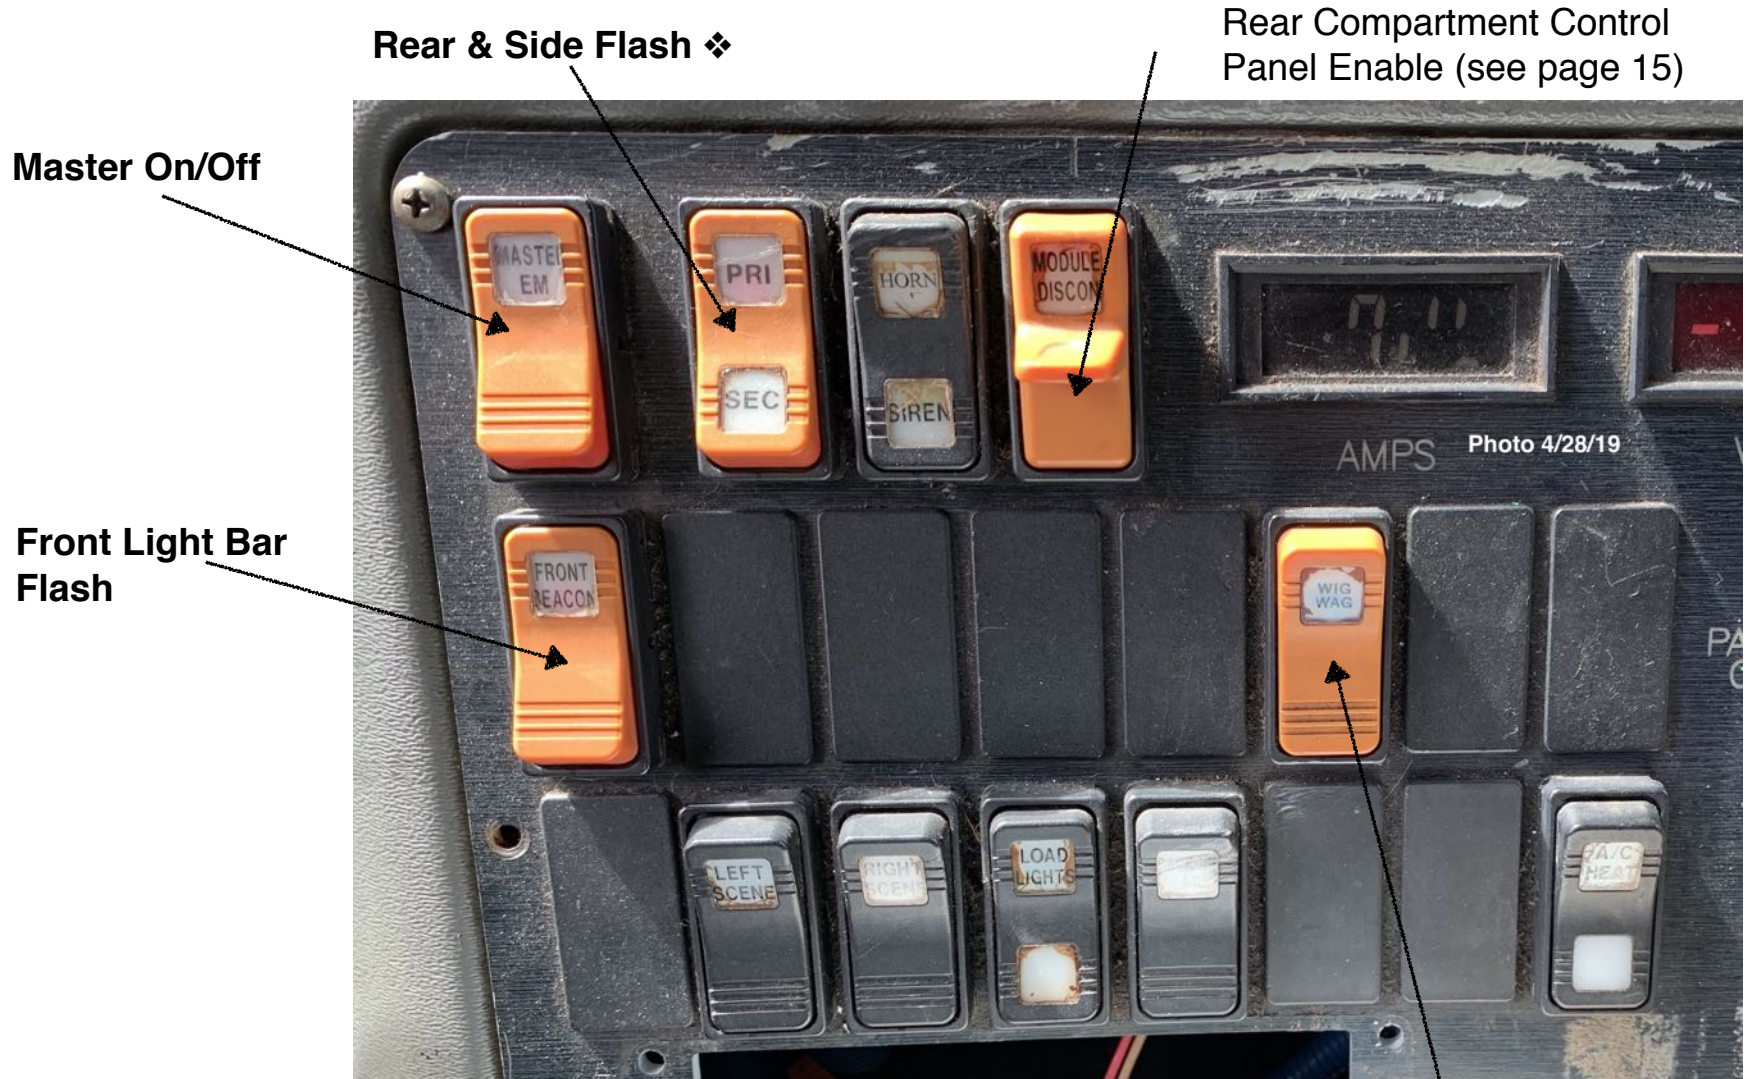

Rear & Side Flash ❖

Rear Compartment Control Panel Enable (see page 15)

Master On/Off

Front Light Bar Flash

Left Exterior ❖ Right Exterior ❖ Rear ❖
White Lights

❖ Up or Down = On
Center position = Off

Keep this off. Function does not work. If on, it may cause a clicking noise from panel above front/rear passage.